# DAYTONA ANIMA F, FDX, FLX ENGINE Owner's Manual

ENGINE No. ANIMA190FDX/FLX: 2745000000-ENGINE No. ANIMA150FDX/FLX: 2745000000-ENGINE No. ANIMA190/150F : 2745000000-

**ENGLISH MANUAL SECTION** 

Page 1 - 21

PARTS CATALOGUE SECTION

Page 21 - 32







# **INTRODUCTION**

Thank you for purchasing of a ANIMA Engine.

This manual explains operation, inspection, basic maintenance and tuning of the engine. If you have any questions, please contact the dealer you purchased the engine/bike from. Please read this manual very carefully before use.



- ANIMA ENGINE is designed strictly FOR COMPETITION USE, ONLY ON A CLOSED COURSE. It is illegal to use this engine on any public road or highway. Off-road use on public space is also illegal.
  - Please check local regulation before use.
- This engine is to be used by EXPERIENCED RIDERS ONLY.
   Fatal accident may be caused unless it is used by experienced riders or maintained by professional and experienced mechanics.
- This engine is to be maintained by professional and experienced mechanics.Serious damage may occur, otherwise.
- 4. This manual explains ONLY THE BASIC operation, inspection, maintenance and tuning, but it is customer's responsibility to maintain the engine to the best possible performance, depending on the circumstances of the time.

### **CUSTOMER'S RESPONSIBILITY & CUSTOMER SERVICE**

### **GENERAL EXCLUSIONS**

Any failures caused by the following reasons are NOT considered as the defects of Products.

(1) Overheating due to improper engine oil temp. control



# ENGINE OIL TEMPERATURE MUST BE CONTROLLED AT 90 DEGREES CELSIUS (194 DEGREES FAHRENHEIT) OR LOWER.

Serious damage will occur in the engine if engine oil temperature exceeds 90 degrees Celsius or 194 degrees Fahrenheit.

It is solely customer's responsibility to control the engine oil temperature.

- (2) Installation of parts or accessories that is not originally equipped on Products. This includes DAYTONA UPGRADE KIT PARTS as well, since those are designed for the top competition riders.
- (3) Abnormal strain, neglect, or abuse
- (4) Accident or collision damage
- (5) Modification to original parts
- (6) Lack of proper maintenance
- (7) Damage due to improper transportation or use

### THE CUSTOMER'S RESPONSIBILITY

THE CUSTOMER'S RESPONSIBILITY shall be:

- (1) Operate and maintain Products as specified in the appropriate Owner's Manual
- (2) Prohibit the modification of the product

### **CUSTOMER SERVICE**


If Products require services, you must take it to the authorized dealer, who is appointed by authorized local distributors of DAYTONA.


DAYTONA Corp. JAPAN is NOT in the position to take care of services of any kind with the customers or authorized dealers due to the contract with authorized local distributors.

# **CONTENTS**

INTRODUCTION	Page 1
CUSTOMER'S RESPONSIBILITY & CUSTOMER SERVICE	Page 2
CONTENTS	Page 3
PART NAMES	Page 4
GENERAL SPECIFICATIONS	Page 5
MAINTENANCE SPECIFICATIONS	Page 6 – 9
MAINTENANCE INTERVALS	Page 10 - 12
PRE-OPERATION INSPECTION AND MAINTENANCE ENGINE OIL LEVEL INSPECTION CARBURETOR SETTING IGNITION TIMING SELECTION REV LIMITER SELECTION ENGINE OIL TEMPERATURE CONTROL	Page 13 - 19 Page 13 Page 14 - 16 Page 17 Page 18 Page 19
ELECTRICAL DIAGRAM	Page 20 - 21
PARTS CATALOGUE	Page 22 – 32

# **PART NAMES**

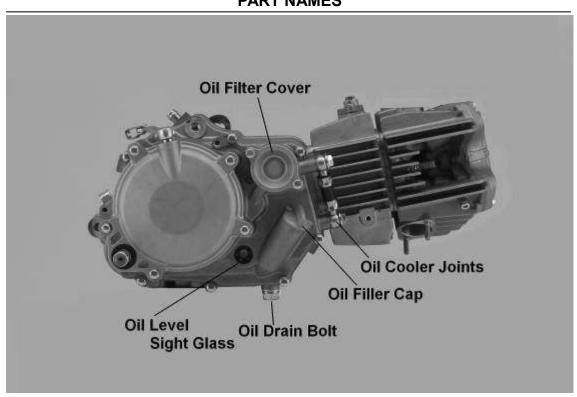

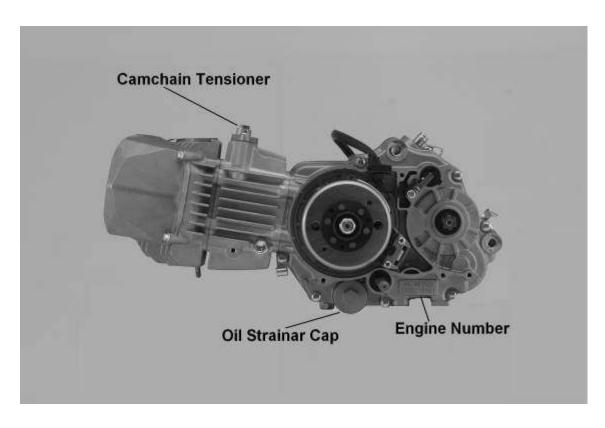

# **GENERAL SPECIFICATIONS**

ENGINE				
Engine Weight (Dry)	21.5 kg			
Engine type	Air Cooled 4-stroke SOHC			
Cylinder arrangement	Single cylinder, Horizontally	mounted		
Displacement	187.18 cm3(ANIMA190), 1	49.74cm3(ANIMA150)		
Bore × stroke	62. 0× 62.0mm(ANIMA190), 6	62.0 x 49.6mm(ANIMA150)		
Compression ratio	12.1 : 1			
Starting system	Kick (Kick pedal is NOT incl	uded in the Engine Kit)		
	With Decompression System	n		
Lubrication system	Wet sump			
Recommended Engine Oil	SAE 10W - 40 or higher gra	de		
	API "SG" or higher grade			
Engine oil capacity				
Periodic oil change	0.60 L			
With oil filter replacement	0.65 L			
Total amount	0.70 L			
	* Need more amount of oil when oil cooler is in use			
Spark plug				
Type/manufacturer	ER9EH / NGK (resistance ty	vpe)		
Gap	0.6 ~ 0.7 mm (0.024 ~ 0.028	3 in)		
Clutch type	Wet, Multi-plate 6-disc			
Transmission	FDX, FLX model	F model		
Primary reduction system	Gear			
Primary reduction ratio				
Timary reduction ratio	67/18 (3.722)	←		
Transmission type	67/18 (3.722) 4-Speed	<b>←</b>		
	, ,	<b>← ←</b>		
Transmission type	4-Speed	<b>← ←</b>		
Transmission type Gear ratio	4-Speed (Counter / Main)	<b>← ← ←</b>		
Transmission type Gear ratio 1st	4-Speed (Counter / Main) 34/13 (2.6153)	<b>← ← ← 25/21 (1.1094)</b>		
Transmission type Gear ratio 1st 2nd	4-Speed (Counter / Main) 34/13 (2.6153) 26/15 (1.7333)	25/21 (1.1094) 22/24 (0.9166)		
Transmission type Gear ratio 1st 2nd 3rd	4-Speed (Counter / Main) 34/13 (2.6153) 26/15 (1.7333) 26/20 (1.3000)	,		
Transmission type  Gear ratio  1st  2nd  3rd  4th	4-Speed (Counter / Main) 34/13 (2.6153) 26/15 (1.7333) 26/20 (1.3000) 24/23 (1.0435)	22/24 (0.9166)		
Transmission type  Gear ratio  1st  2nd  3rd  4th  GEAR SHIFT PATTERN	4-Speed (Counter / Main) 34/13 (2.6153) 26/15 (1.7333) 26/20 (1.3000) 24/23 (1.0435)	22/24 (0.9166)		

Item	Standard	Limit
Cylinder head		0.05 mm
Warp limit		(0.002 in)
Cylinder:		
Bore size	62.00 - 62.015mm (2.4409 – 2.4415)	
Out of round limit		0.05 mm
		(0.002 in)
Camshaft:		
Drive method	Chain drive (Left)	
Cam dimensions		
H		
Intake "H	30.18 ~ 30.30 mm	29.84 mm
	(1.1882 ~ 1.1929 in)	(1.1748 in)
"D		
		<del></del>
Exhaust "H	30.21 ~ 30.33 mm	29.87 mm
	(1.1894 ~ 1.1941 in)	(1.1760 in)
"D	,	

Item	Standard	Limit
Timing chain:		
Timing chain No. of links	94 link	
Timing chain adjustment		
method	Automatic	
Valve, valve seat, valve guide	e:	
Valve clearance (cold)	IN 0.05 ~ 0.07 mm (0.0020~ 0.0028 in)	
	0.05 ~ 0.07 mm (0.0020~ 0.0028 in)	
E	EX	
Valve dimensions:		
	\\	
⊢ A →		≓D
, ,		' '
"A" head diameter IN	24.4 ~ 24.6 mm (0.9606 ~ 0.9685 in)	
EX	20.9 ~ 21.1 mm (0.8228 ~ 0.8307 in)	
"B" face width IN		
EX		
"C" seat width IN	0.8 ~ 1.0 mm (0.0314 ~ 0.03937 in)	1.6 mm (0.0630 in)
EX	0.8 ~ 1.0 mm (0.0314 ~ 0.03937 in)	1.6 mm (0.0630 in)
"D" margin thickness IN		
EX		
Stem outside diameter IN	4.470 ~ 4.485 mm(0.17598 ~ 0.1766 in)	4.42 mm (0.1740 in)
EX	4.470 ~ 4.485 mm(0.17598 ~ 0.1766 in)	,
Guide inside diameter IN	4.500 ~ 4.512 mm(0.17716 ~ 0.1776 in)	4.55 mm(0.1791 in)
EX	4.500 ~ 4.512 mm(0.17716 ~ 0.1776 in)	4.55 mm(0.1791 in)
Stem-to-guide clearance IN	0.015 ~ 0.042 mm(0.0005 ~ 0.0016 in)	0.08 mm(0.003 in)
EX	0.03 ~ 0.057 mm(0.0011 ~ 0.0022 in)	0.10 mm(0.004 in)
Mal a sada		
Valve spring:		
Free length	40.50(4.0707 :-)	40.00
IN ( φ 16.2)	42.59 mm(1.6767 in)	40.38 mm(1.5897 in)
EX ( φ 16.2)	42.59 mm(1.6767 in)	40.38 mm(1.5897 in)

Item	Standard	Limit
Piston:		
Piston to cylinder clearance	0.01 ~ 0.04 mm	0.1mm(0.004 in)
	(0.00039 ~ 0.00157in)	
Piston size "D"	61.975 ~ 61.99 mm	
H	(2.4399 ~ 2.4405 in)	
Measuring point "H"	8 mm (0.31 in)	
Piston off-set		
Piston pin bore inside	14.002 ~ 14.013 mm	14.06 mm
diameter	(0.5513 ~ 0.5517 in)	(0.5535 in)
Piston pin outside diameter	13.995 ~ 13.998 mm	13.97 mm
	(0.5510 ~ 0.5511 in)	(0.55 in)
Piston rings:		
Top ring:		
Dimensions (H × W)	0.8 × 2.25 mm (0.06 × 0.09 in)	
End gap (installed)	0.05 ~ 0.20 mm (0.006 ~ 0.010 in)	0.4 mm (0.020 in)
Side clearance (installed)	0.015 ~ 0.045 mm(0.0012 ~ 0.0026in)	0.10 mm (0.005 in)
2nd ring:		
Dimensions (H × W)	0.8 × 2.25 mm (0.06 × 0.09 in)	
End gap (installed)	0.05 ~ 0.20 mm (0.006 ~ 0.010 in)	0.4 mm (0.031 in)
Side clearance	0.015 ~ 0.045 mm(0.0012 ~ 0.0026in)	0.10 mm (0.005 in)
Oil ring:		
Dimensions (H × W)	1.50 × 2.25 mm (0.06 × 0.09 in)	
End gap (installed)	0.2 ~ 0.7 mm (0.004 ~ 0.016 in)	0.9 mm (0.005 in)

Item	Standard	Limit
Crankshaft:		
Crank width "A"	42.2 mm (1.66142 in)	
Runout limit "C"	0.03 (one-side)	0.1 mm (0.0039 in)
Big end side clearance "D"	0.1 ~ 0.35 mm (0.0039 ~ 0.0137 in)	0.6 mm (0.0236 in)
Small end free play "E"		
C C C A D		
Clutch:		
Friction plate thickness	2.9 ~ 3.1 mm (0.114 ~ 0.122 in)	2.7 mm (0.106 in)
Quantity	6	
Clutch plate thickness	0.9 ~ 1.0 mm (0.043 ~ 0.051 in)	0.7 mm (0.0275 in)
Quantity	5	
Warp limit		0.2 mm (0.0787 in)
Clutch spring free length		
Quantity	4	

# **MAINTENANCE INTERVALS**

Item	After break-	Every race	Every third	Every fifth	As requir	Remarks
	in		(or 500	(or 1,000	ed	
	(50km)		km)	km)		
ENGINE OIL						
Replace	•	•				
Inspect					•	
ENGINE VALVES						The engine must
Check the valve	•		•			be cold.
clearances						Check the valve
Inspect			•			seats and valve
Replace					•	stems for wear.
VALVE SPRINGS						Check the free
Inspect			•			length and the tilt.
Replace					•	
CAMSHAFTS						Inspect the
Inspect			•			camshaft surface.
Replace					•	
TIMING CHAIN						Check for wear on
SPROCKETS, TIMING						the teeth and for
CHAIN			•			damage.
Inspect					•	
Replace						
PISTON						Inspect crack
Inspect			•		•	Inspect carbon
Clean					•	deposits and
Replace					•	eliminate them.

# **MAINTENANCE INTERVALS**

Item	After	Every	Every	Every	As	Remarks
	break-	race	third	fifth	requir	
	in		(or 500	(or 1,000	e-ed	
	(50km)		km)	km)		
PISTON RING						Check ring end
Inspect			•			gap
Replace			•		•	
PISTON PIN						
Inspect			•			
Replace					•	
CYLINDER HEAD						Inspect carbon
Inspect and clean			•			deposits and
Replace					•	eliminate them.
						Change gasket
CYLINDER						Inspect score
Inspect and clean			•			marks
Replace					•	Inspect wear
CLUTCH						Inspect housing,
Inspect and adjust	•	•				friction plate,
Replace					•	clutch plate and
						spring
TRANSMISSION						Inspect wear of
Inspect				•		gear and bearings
Replace					•	
SHIFT FORK, SHIFT						Inspect wear
CAM, GUIDE BAR						
Inspect				•		
Replace					•	
ROTOR NUT						
Retighten	•			•		
CRANK						
Inspect and align				•	•	
CARBURETOR						
Inspect, adjust, clean	•	•				

# **MAINTENANCE INTERVALS**


Item	After break- in (50km)	Every race	Every third (or 500 km)	Every fifth (or 1,000 km)	As requir e-ed	Remarks
SPARK PLUG Inspect and clean	•		•		_	
Replace OIL COOLING					•	
SYSTEM(Option)  Check hoses &	•	•				
leakage Replace hoses and gaskets					•	
AIR FILTER (Option)  Clean and lubricate  Replace	•	•			•	Use foam air-filter oil or equivalent oil
OIL FILTER Replace	•	•				
OIL STRAINER Clean				•		

Before riding for break-in operation, practice or a race, make sure the engine is in good operating condition.

Before using this engine, check the following points.

### **ENGINE OIL LEVEL INSPECTION**

- 1. Start the engine, warm it up for several minutes, and then turn off the engine and wait for a few minutes.
- 2. Place the bike on a level place and hold it up on upright position.
- Check the oil level through the sight glass.
   Oil level should be between the upper and the central point of the sight glass.

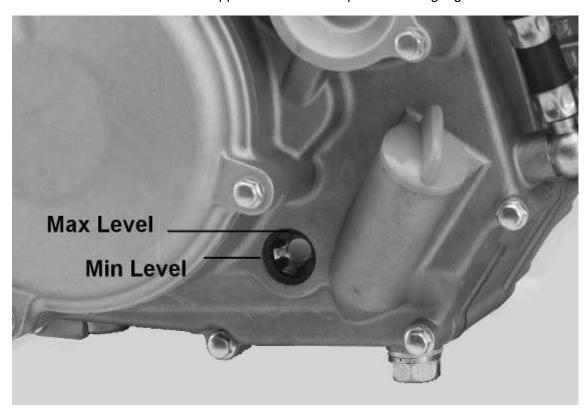

4. Add oil to proper level



Add oil as necessary, when install the oil cooler.

### CARBURETOR SETTING

The carburetor is extremely sensitive to foreign matter (dirt, sand, water, etc.).

During installation, do not allow foreign matter to get into the carburetor.

Always handle the carburetor and its components carefully. Even slight scratches, bends or damage to carburetor parts may prevent the carburetor from functioning correctly.

Carefully perform all servicing with the appropriate tools and without applying excessive force.

After installing the carburetor, check that the throttle operates correctly and opens and closes smoothly.

It is highly recommended that the carburetor setting is performed by an experienced mechanic to obtain the best possible performance.

Atmospheric conditions and carburetor settings


Air Temp.	Humidity	Air Pressure (Altitude)	Mixture	Setting
High	High	Low	Richer	Leaner
		(High)		
Low	Low	High	Leaner	Richer
		(Low)		

The air density (i.e., concentration of oxygen in the air) determines the richness or leanness of the air/fuel mixture. Therefore, refer to the above table for mixture settings.

### That is:

- Higher temperature expands the air with its resultant reduced density.
- Higher humidity reduces the amount of oxygen in the air by so much of the water vapor in the same air.
- Lower atmospheric pressure (at a high altitude) reduces the density of the air.

Effects of the setting parts on the throttle valve opening

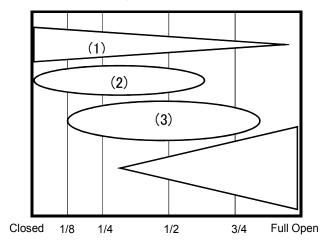

- (1) Slow Jet / Pilot Screw
- (2) Throttle valve cutaway
- (3) Jet Needle / Needle Jet
- (4) Main Jet

Here is the recommended setting information of KEIHIN PWK33 and PE28 carburetor, for your reference.

### **Tested Conditions**

Carburetor KEIHIN PWK33 (DT#86588)

Air Temperature 20 degrees Celsius

Humidity 50%

Atmospheric Pressure 1000 hPa

Without Air Filter

Fuel Octane#100

Item	Recommendation					
Main Jet	ANIMA190: #87005 (#125)	ANIMA150: #87003 (#120)				
		#87004 (#122)				
		#87005 (#125)				
Slow Jet	#87006 (#42)					
Throttle Valve	#6.0 (Original of #86588)					
Jet Needle	#86590 W956R-1175W(DAYTONA original)					
	#86640 W956R-1171N					
	Clip position: In the 2 <sup>nd</sup> or 3rd groove from the top					
Air screw	2 return					

Carburetor KEIHIN PE28 (DT#85707)

Air Temperature 20 degrees Celsius

Humidity 50%

Atmospheric Pressure 1000 hPa

with UNI Air Filter (#UP-4229ST)

Fuel Octane#100

Item	Recommendation			
Main Jet	ANIMA190: #87005 (#125)	ANIMA150: #87003 (#120)		
		#87004 (#122)		
		#87005 (#125)		
Slow Jet	#87006 (#42)			
Throttle Valve	ANIMA190: #3.0	ANIMA150: #69353 (#2.5)		
	(Original of #85707)			
Jet Needle	#65414 / 46JFQ (-2 / \$\phi\$ 2.505)			
	Clip position: In the 3rd groove from the top			
Air screw	2 return			

### **IGNITION TIMING SELECTION: FDX, FLX**

ANIMA FDX/FLX ENGINE comes with ignition timing selectable CDI unit.

To change the ignition timing, it needs to change the connection of the wires that come out of the CDI unit.

WIRE CONNECTION TABLE

Color of Wire	WHITE	GREEN	YELLOW	GREEN	INGITION TIMING	
Timing (1)	0	0	0	0	REDUSE	
Timing (2)	0	0	<u> </u>			
Timing (3)	<u> </u>		0	0		
Timing (4)	0	_	<u> </u>		ADVANCE	
WARNING USE ADVANCE TIMING GIVES HIGH TEMPERATURE TO ENGINE.						



SERIOUS DAMAGE WILL OCCURE IN THE ENGINE BY ABNORMAL COMBUSTION.

# <u>Notes</u>

- (a) Reduce Timing gives more torque at low-middle rpm level.
- (b) Advance Timing gives more torque at higher rpm level than the Reduce Timing.

# Example (How to select)

\* To select Timing (2), connect Yellow and Green wires.

**REV LIMITER SELECTION: FDX, FLX** 

ANIMA FDX/FLX ENGINE comes with rev limiter selectable CDI unit.

To change the rev limiter, it needs to change the connection of the wires that come out of the CDI unit.

WIRE CONNECTION TABLE

Color of Wire	BLUE	GREEN	BLACK/ YELLOW
Rev Limiter (1) -11,500rpm	0	0	0
Rev Limiter (2) -12,200rpm	0	<u> </u>	
Rev Limiter (3) -12,900rpm	<u> </u>	<u> </u>	0

Example (How to select)

<sup>\*</sup> To select Rev Limiter (3)-12,900rpm, connect Blue and Green wires.

### **ENGINE OIL TEMPERATURE CONTROL**



### WARNING

Engine oil temperature is to be strictly controlled at 90 degrees Celsius (194 degrees Fahrenheit) or lower.

Serious damage will occur in the engine if engine oil temperature exceeds 90 degrees Celsius or 194 degrees Fahrenheit.

It is solely customer's responsibility to control the engine oil temperature.

Any failures caused by overheating are NOT considered as the defects of Products.


It is highly recommended to use HIGH-EFFICIENT OIL COOLER and OIL TEMPERATURE GAUGE to protect the engine.




The above OIL COOLER is just a recommendation.

Engine oil temperature can be heated up over 90 degrees Celsius or 194 degrees Fahrenheit, even if the above recommended OIL COOLER is used.

Again, customer needs to control the oil temperature very carefully.

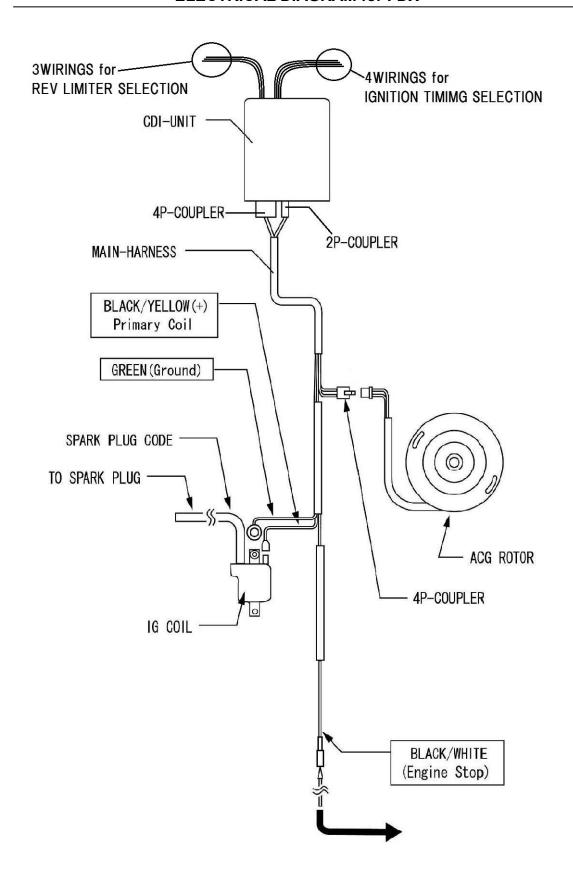

# **ELECTRICAL DIAGRAM for FLX, F**

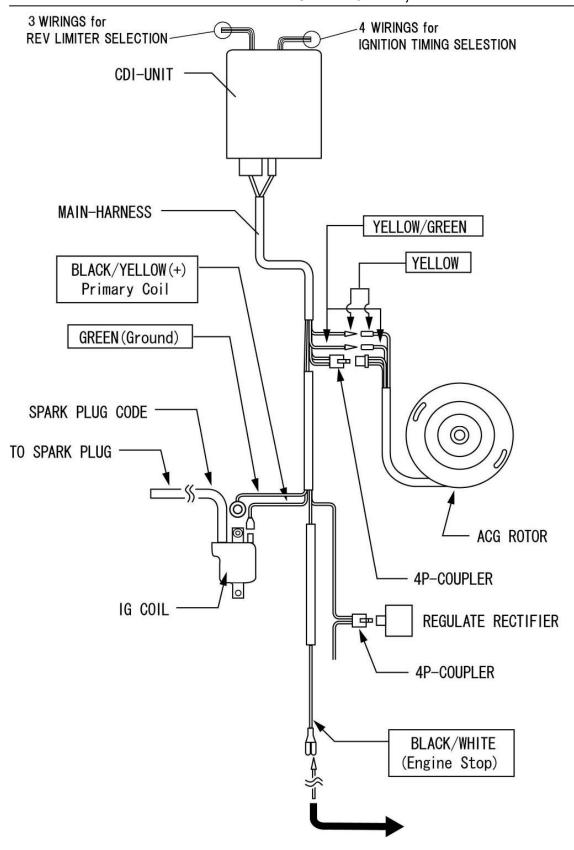


<sup>\*\*\*</sup>ANIMA "F" model is non-selectable CDI.\*\*\*

Engine No. ANIMA 190/150 FDX/FLX: 2745000000-Engine No. ANIMA 190/150 F : 2745000000-




REVISED DATE 19 January, 2012

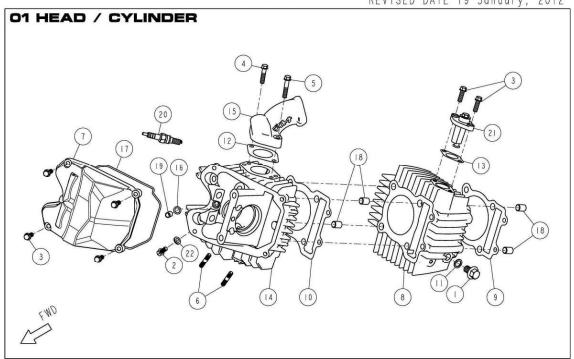


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86448	BOLT, HEXAGON FLANGE M10x16	1	20N·m
2	85877	BOLT, HEXAGON FLANGE M6x12	1	
3	86468	BOLT, HEXAGON FLANGE M6x18	6	
4	86466	BOLT, HEXAGON FLANGE M6x25	1	
5	86471	BOLT, HEXAGON FLANGE M6x30	1	
6	83703	BOLT, STUD M6x32	2	
7	86367	COVER, CYLINDER HEAD	1	
8	86366	CYLINDER	1	Ф 62.0mm
9	86436	GASKET, BASE CYLINDER	1	t=0.25
10	86440	GASKET, HEAD CYLINDER	1	t=0.25
11	86476	GASKET, M10	1	
12	86405	GASKET, MANIFOLD	1	
13	86439	GASKET, TENSIONER CAM CHAIN	1	
14	86368	HEAD, CYLINDER	1	
15	86404	MANIFOLD, INTAKE	1	
16	86479	O-RING	1	
17	86434	O-RING, COVER HEAD	1	
18	83720	PIN, DOWEL Φ10xΦ8.4x14	4	
19	83747	PIN, DOWEL Φ8xΦ6.3x12	1	
20	87008	SPARK PLUG ER9EH	1	8N·m
21	86396	TENSIONER, CAM CHAIN COMP 1		
22	86456	WASHER, Φ6.3xΦ12x1.5	1	



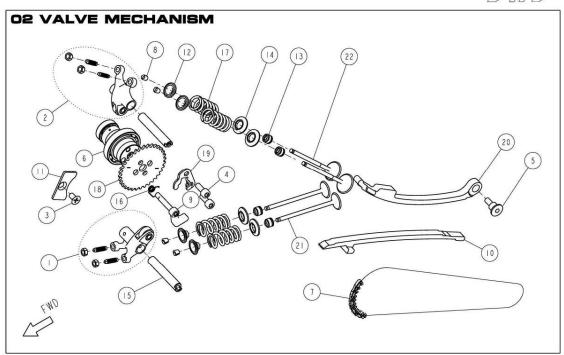


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86481	ARM, ROCKER ROLLER EX. COMP	1	
2	86393	ARM, ROCKER ROLLER IN. COMP	1	
3	86460	BOLT, COUNTERSINK M6x15	1	10N·m W/THREAD LOCKER
4	86883	SCREW M6X16	2	10N·m
5	86447	BOLT, TENSIONER	1	10N·m
6	86878	CAMSHAFT 240°	1	for 190F, FDX, FLX
6	87163	CAMSHAFT 150CC	1	for 150F, FDX, FLX
6	87347	CAMSHAFT COMP, 00	1	for 190F, 150F
7	86391	CHAIN, CAMSHAFT DRIVE	1	94L
8	86402	COTTER, VALVE	8	
9	87622	SHAFT W/WEIGHT,DECOMP. VER.2	1	
10	86395	GUDE , CHAIN CAMSHAFT	1	
11	86389	PLATE, STOPPER CAM	1	
12	86400	RETAINER, SPRING VALVE	4	
13	86403	SEAL, VALVE STEM Φ4.5	4	
14	86401	SEAT, SPRING VALVE	4	
15	86392	SHAFT, ROCKER	2	
16	87621	SPRING,RETURN DECOMP. VER.2	1	
17	86624	SPRING, VALVE	4	for 190F, FDX, FLX/150F
17	87343	SPRING, VALVE	4	for 150FDX, FLX
18	86879	SPROCKET, CAMSHAFT DRIVEN	1	34T
19	87620	PLATE,STOPPER DECOMP. VER.2	1	
20	86394	TENSIONER, CAM CHAIN	1	
21	86623	VALVE, EXHAUST Φ21	2	
22	86397	VALVE, INTAKE Φ24.5	2	



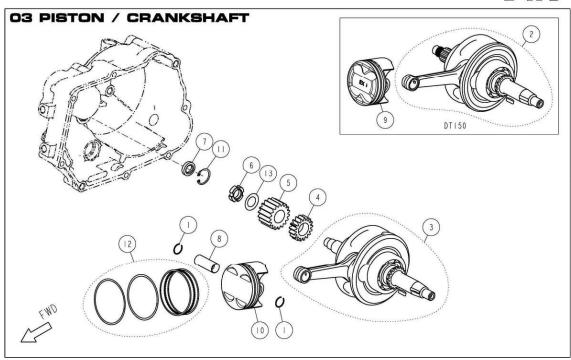


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86453	CLIP, PIN PISTON	2	
2	86381	CRANK SHAFT ASSY 150F	1	STROKE 49.6mm
3	86620	CRANK SHAFT ASSY 190F	1	STROKE 62.0mm
4	86383	GEAR, OIL PUMP DRIVE	1	17T
5	86415	GEAR, PRIMARY DRIVE	1	18T
6	83768	NUT, SMALL M14	1	64N·m
7	86443	OIL SEAL, Φ12xΦ20x5t	1	
8	86379	PIN, PISTON Φ14	1	
9	86378	PISTON for 150F	1	BORE Φ62.0
10	86621	PISTON for 190F	1	BORE Φ62.0
11	86462	RETAINING RING, RTWN22	1	
12	86380	RING SET, PISTON	1	
13	86411	WASHER, SPRING	1	



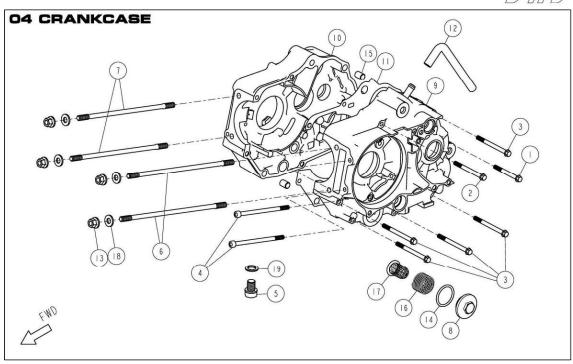


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86474	BOLT, HEXAGON FLANGE M6x55	1	
2	83761	BOLT, HEXAGON FLANGE M6x65	1	
3	86360	BOLT, HEXAGON FLANGE M6x70	5	
4	86459	BOLT, HEXAGON SOCKET M6x105	2	8N·m
5	83755	BOLT, OIL DRAIN M12x1.5	1	25N·m
6	86444	BOLT, STUD A	2	M8xP1.25 L=223mm
7	86445	BOLT, STUD B	2	M8xP1.25 L=203.5mm
8	86369	COVER, STRAINER OIL	1	12N·m
9	86370	CRANK CASE, LH	1	
10	86884	CRANK CASE, RH	1	
11	86438	GASKET, CRANKCASE	1	
12	86371	HOSE, BREATHER	1	
13	86451	NUT FLANGE, M8	4	22N·m
14	86433	O-RING, Φ30xΦ3	1	
15	83720	PIN, DOWEL Φ10x Φ8.4x14	2	
16	86385	SPRING, STRAINER	1	
17	86387	STRAINER, OIL	1	
18	86457	WASHER, GASKET M8	4	
19	83754	WASHER, OIL DRAIN M12	1	



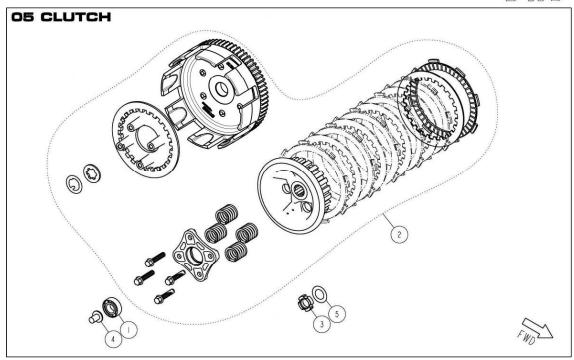

Ref No.	Part No.	DESCRIPTION		REMARKS
1	83786	BEARING, #6000	1	
2	87619	CLUTCH ASSY,W/FORGED GEAR	1	
3	83768	NUT, SMALL M14	1	64N·m
4	83787	PIN, LIFTER CLUTCH	1	
5	86410	WASHER, SPRING Φ24xΦ14.2x1.2	1	




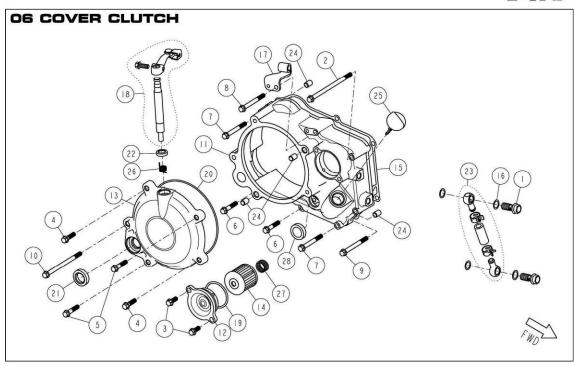

Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86446	BOLT, BANJO M10x22.5	2	
2	86362	BOLT, HEXAGON FLANGE M6x105	1	
3	86486	BOLT, HEXAGON FLANGE M6x15	2	
4	86469	BOLT, HEXAGON FLANGE M6x22	2	
5	86485	BOLT, HEXAGON FLANGE M6x28	2	
6	86471	BOLT, HEXAGON FLANGE M6x30	2	
7	86473	BOLT, HEXAGON FLANGE M6x50	2	
8	86474	BOLT, HEXAGON FLANGE M6x55	1	
9	83759	BOLT, HEXAGON FLANGE M6x60	1	
10	86361	BOLT, HEXAGON FLANGE M6x90	1	
11	86376	COVER, CLUTCH	1	
12	86374	COVER, OIL FILTER	1	
13	86377	COVER, SMALL CLUTCH	1	
14	83489	FILTER, OIL	1	
15	86437	GASKET, COVER CLUTCH	1	
16	86476	GASKET, M10	4	
17	86412	HOLDER, CABLE CLUTCH	1	
18	86414	LEVER, CLUTCH COMP	1	
19	86432	O-RING, Φ38.6×2.6	1	
20	86435	O-RING, COVER SMALL CLUTCH	1	
21	86441	OIL SEAL, Φ16xΦ26x7	1	
22	86442	OIL SEAL, Φ17xΦ10x5	1	
23	86406	OIL THROUGH COMP	2	
24	83747	PIN, DOWEL Φ8xΦ6.3x12	4	
25	86386	RULER	1	
26	86413	SPRING, LEVER CLUTCH	1	
27	86375	SPRING, OIL FILTER	1	
28	86475	WINDOW, OIL LEVEL	1	

Engine No. ANIMA 190/150 FDX/FLX: 2745000000-Engine No. ANIMA 190/150 F : 2745000000-



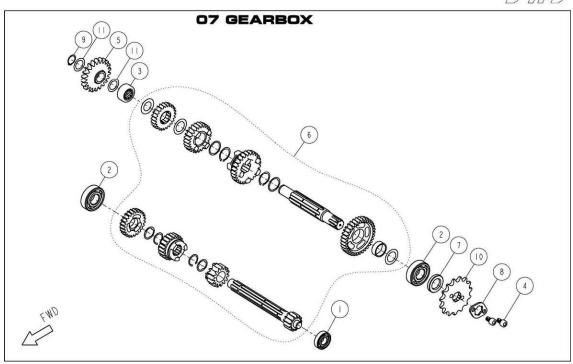


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	83788	BEARING #6001	1	
2	83795	BEARING #6203	2	
3	86454	BEARING NK152712	1	
4	86464	BOLT, HEXAGON SOCKET M6x10	2	
5	86418	GEAR IDLE, STARTER	1	
6	86416	GEAR, COMP, F	1	for F
6	86919	GEAR, COMP, FDX/FLX	1	for FDX, FLX
7	83796	OIL SEAL, Φ29xΦ17x5	1	
8	86420	PLATE, FIXING SPROCKET DRIVE	1	
9	86463	RETAINING RING Φ13.6	1	
10	86419	SPROCKET, DRIVE 15T	1	
11	86455	WASHER, Φ22x Φ15x0.5	2	

GEAR,		(4speed)				
	1st 2nd 3rd					
MAIN	13	15	21	24		
COUNTER	34	26	25	22		
	(2.6153)	(1.7333)	(1.1904)	(0.9166)		


GEAR,		(4speed)					
	1st 2nd 3rd						
MAIN	13	15	20	23			
COUNTER	34	26	26	24			
	(2.6153)	(1.7333)	(1.3000)	(1.0435)			



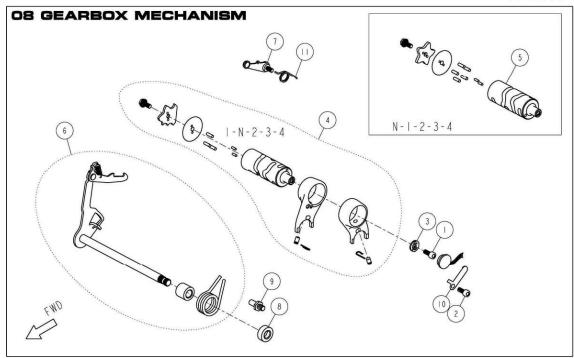


Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86449	BOLT, HEXAGON SOCKET M6		
2	85877	BOLT, HEXAGON SOCKET M6x15		
3	83833	CONTACT,GEAR INDICATION		
4	87177	DRUM, SHIFT 1-N-2-3-4 COMP	1	for F
5	86421	DRUM, SHIFT N-1-2-3-4 COMP	1	for FDX, FLX
6	87178	LEVER, GEAR SHIFT COMP	1	for F
6	86915	LEVER, GEAR SHIFT COMP	1	for FDX, FLX
7	86424	LOCATING PLATE UNIT	1	12N·m
8	83837	OIL SEAL, Φ24xΦ16x10	1	
9	86480	PIN, LOCATING SHIFT LEVER	1	15N·m
10	85876	PLATE, LOCATING SWITCH N.	1	
11	86423	SPRING, LOCATING PLATE	1	



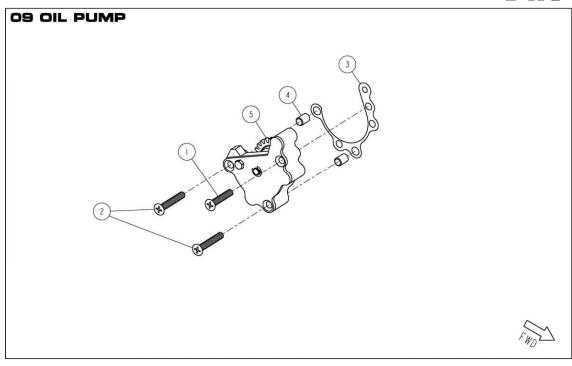


Ref No.	Part No.	DESCRIPTION		REMARKS
1	84678	OLT, COUNTERSUNK M6x30		10N·m
2	84677	BOLT, COUNTERSUNK M6x35	2	10N·m
3	84676	GASKET, PUMP OIL	1	
4	83747	PIN, DOWEL Φ8xΦ6.3x12	2	
5	86382	PUMP, OIL ASSY	1	
	·			



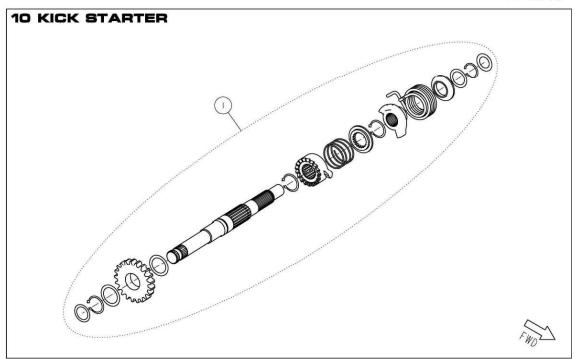

Ref No.	Part No.	DESCRIPTION	QTY	REMARKS
1	86407	KICK STARTER ASM	1	



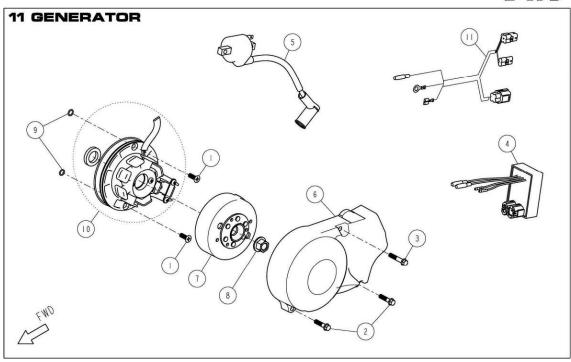

Ref No.	Part No.	DESCRIPTION		REMARKS	
1	86461	BOLT, COUNTERSUNK M6x15	2 10N·m		
2	86464	BOLT, HEXAGON FLANGE M6x25	5x25 2		
3	86472	BOLT, HEXAGON FLNAGE M6x32			
4	87348	BOX, CDI - NON SELECTABLE PROGRAM	1	for F	
4	87349	BOX, CDI WITH SELECTABLE REV LIMITER	OX, CDI WITH SELECTABLE REV LIMITER 1 for FDX,		
5	86426	COIL, IGN ITION	1		
6	86373	COVER, MAGNET	1		
7	86431	FLYWHEE MAGNET COMP	1		
8	86452	NUT, MAGNET M12	1	64N·m	
9	86479	O-RING, Φ6.5xΦ1.8	2		
10	86916	STATOR ASSY, W/O LIGHT SYSTEM	1	for FDX	
10	86430	STATOR ASSY, WITH LIGHT SYSTEM	1	for F, FLX	
11	86917	WIRE HERNESS, W/O LIGHT SYSTEM	1	for FDX	
11	86428	WIRE HERNESS, WITH LIGHT SYSTEM	1	for F, FLX	
12	87189	REGULATE RECTIFIER		for F, FLX	

